

## Supplies:

- Router
- Router Bit
  - no spiral (straight bit is best)
  - no taper
  - about ¼ inch diameter
- Safety Glasses



Use double-sided tape on bottom of foam sheet to prevent movement.




## Arrange Tools





## Trace Tools



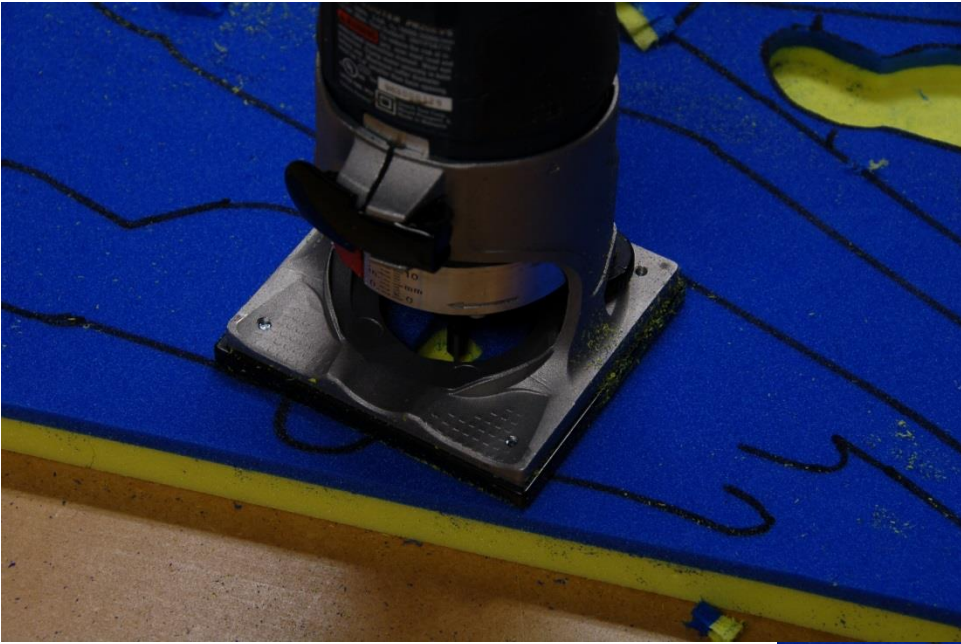


First Cut

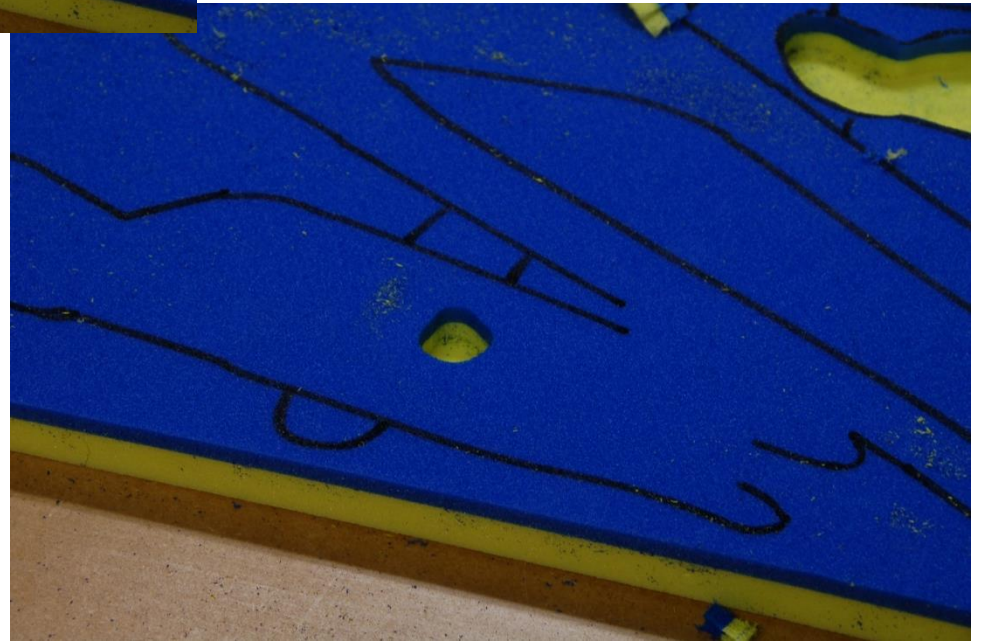

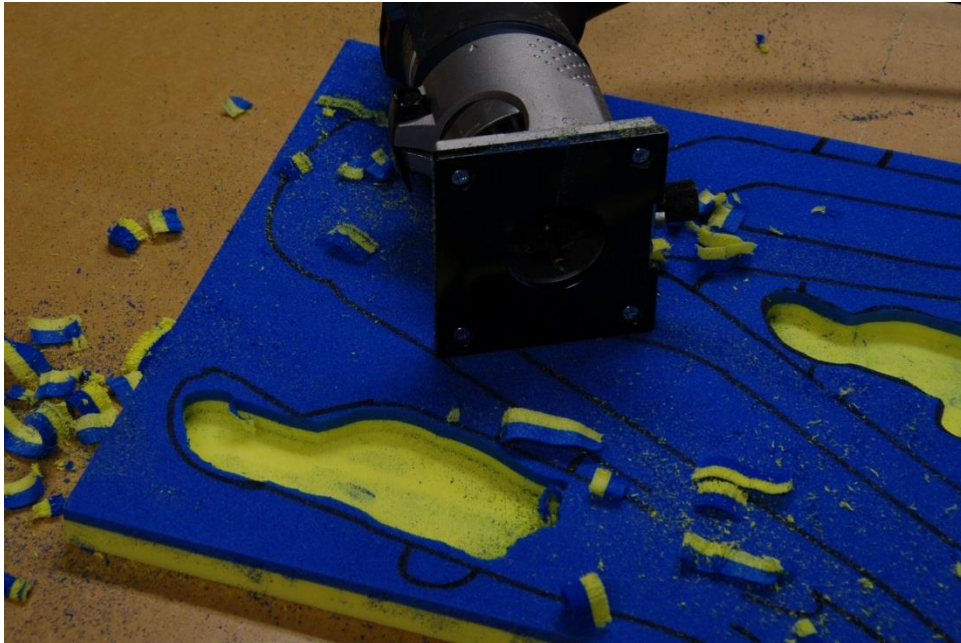

Make Additional Cuts  
Until Reaching the Line

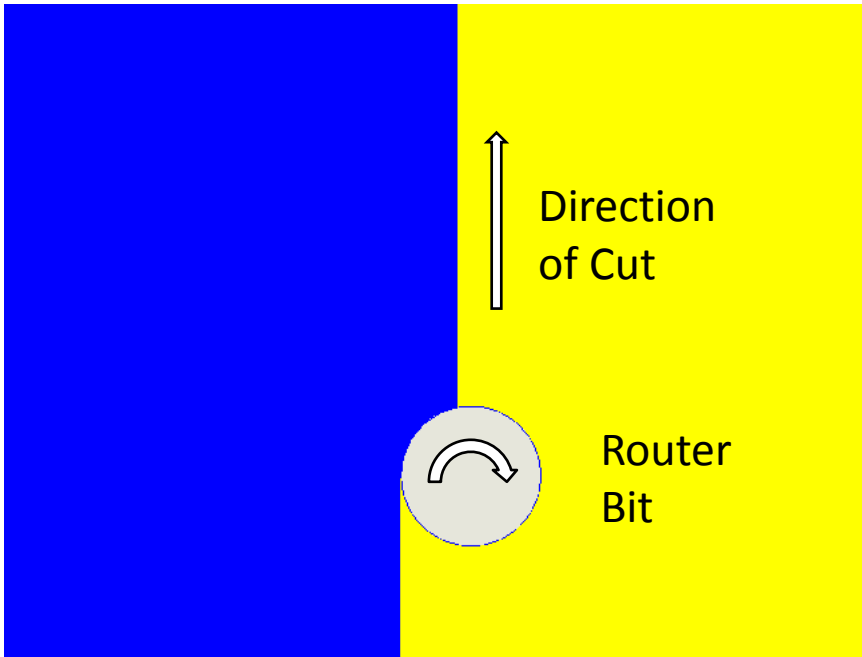

Finished Cutting



## Check Fit of Tools

